

# MIYOTA

## UNIVERSAL MASTERPIECE BORN IN JAPAN MADE IN JAPAN METAL MOVEMENT

### INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

**CALIBRE NO. 0S00**

**CHRONOGRAPH FUNCTION: CENTER SECOND HAND CHRONOGRAPH 1/1 sec. Timing up to 11 hours 59 minutes 59 seconds.**

**BATTERY: SR927SW**

#### A) DISPLAYS AND BUTTONS

##### B) SETTING THE TIME


##### C) SETTING THE DATE

##### D) SETTING THE DAY

##### E) USING THE CHRONOGRAPH

##### F) CHRONOGRAPH RESET( INCL. AFTER REPLACING BATTERY)

#### A) DISPLAYS AND BUTTONS

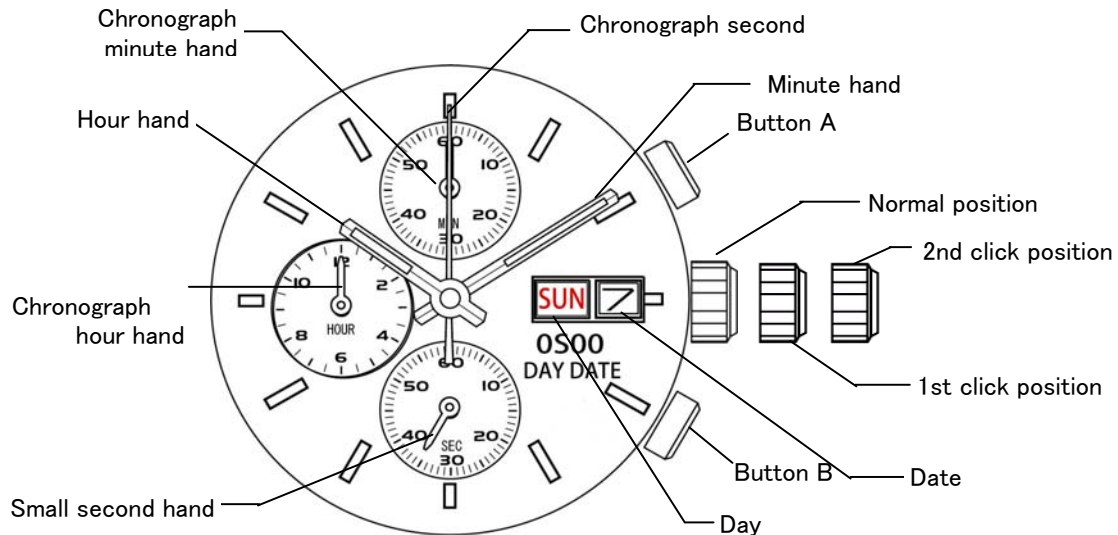

#### B) SETTING THE TIME

1. Pull the crown out to the 2nd click position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, small second hand begins to run.

#### C) SETTING THE DATE

1. Pull the crown out to the 1st click position.
2. Turn the crown anticlockwise to set the date.
  - \* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the Normal position.

#### D) SETTING THE DAY

1. Pull the crown out to the 1st click position.
2. Turn the crown clockwise to set the day.
  - \* If the day is set between the hours of around 11:15 PM and 6:00 AM, the day may not change on the following day.
3. After the day has been set, push the crown back to the Normal position.


### E) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to maximum of 11 hours 59 minutes 59 seconds.

The chronograph second hand keeps continuously for 11 hours 59 minutes 59 seconds after starting.

Measuring time with the chronograph

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "B" resets the chronograph and the chronograph second hand, chronograph minute hand, and chronograph hour hand return to zero position.

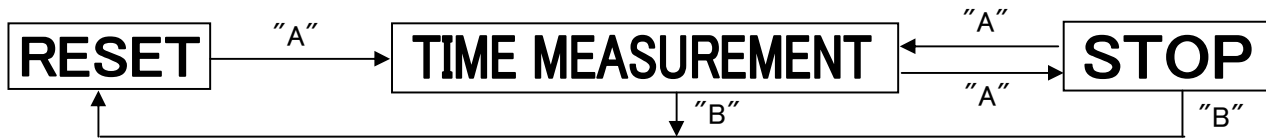

### F) CHRONOGRAPH RESET(INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the 2nd position.
2. Press button "A" to set the chronograph second hand to zero position. The chronograph hand can be advanced by continuously pressing button "A".
  - \* The chronograph hour and minutes hands are synchronized with chronograph second hand.
  - \* The chronograph second hand can be advanced one scale by pressing button "A" once.
  - \* The chronograph second hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand have been reset to zero position, push the crown back to the normal position.
  - \* Do not return crown to normal position while chronograph second hand returns to 12:00 (ZERO) position. Hand stops on the way when crown is returned to normal position and these positions are recognized as 12:00 (ZERO) position.

*These specifications might be changed without prior notice.*

**CITIZEN WATCH CO., LTD.**