

MIYOTA

UNIVERSAL MASTERPIECE BORN IN JAPAN MADE IN JAPAN METAL MOVEMENT

INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

CALIBRE NO. 6S11/21

FUNCTION: CHRONOGRAPH TIMING UP TO 59 MINUTES 59 SECONDS

(CENTER SECOND HAND, MINUTE HAND)

BATTERY: SR927SW

A) DISPLAYS AND BUTTONS

 
 
B) SETTING THE TIME

C) SETTING THE DATE

D) USING THE CHRONOGRAPH

E) CHRONOGRAPH RESET (INC. AFTER REPLACING BATTERY)

A) DISPLAYS AND BUTTONS

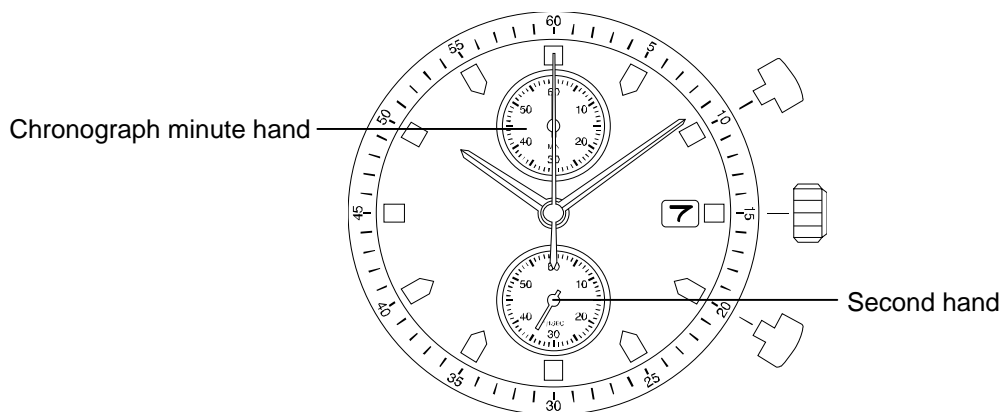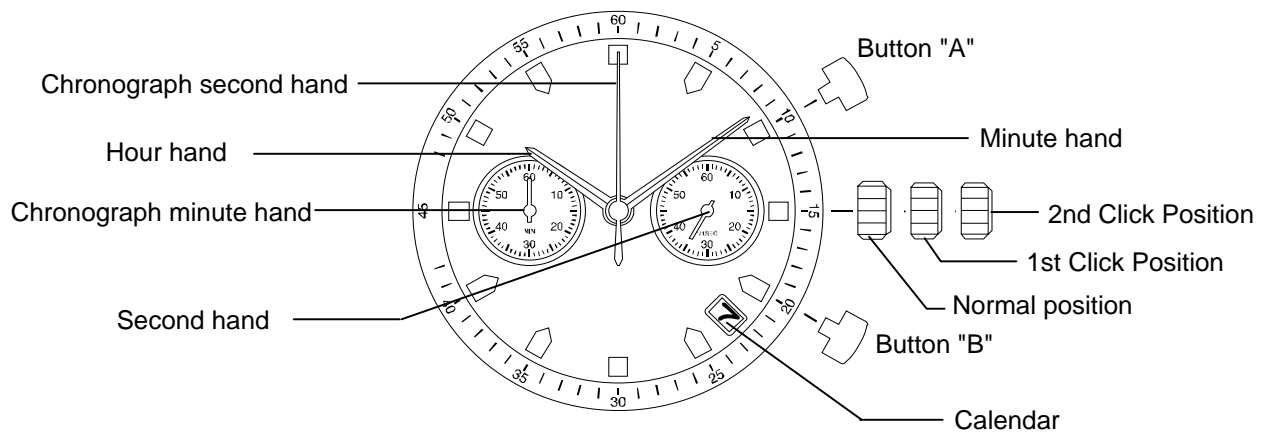

B) SETTING THE TIME

1. Pull the crown out to the 2nd Click Position.
2. Turn the crown clockwise to set hour and minute hands.
3. After the time has been set, push the crown back to the Normal position.

C) SETTING THE DATE

 
1. Pull the crown out to the 1st Click Position.
2. Turn the crown clockwise to set the date.
 - * If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the Normal position.

D) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to maximum of 59min 59sec.

[Measuring time with the stopwatch]

1. Press button "A" to start the chronograph.
2. The chronograph can be started and stopped each time button "A" is pressed.
3. Press button "B" to reset the chronograph and chronograph minute and second hands return to their Zero positions.

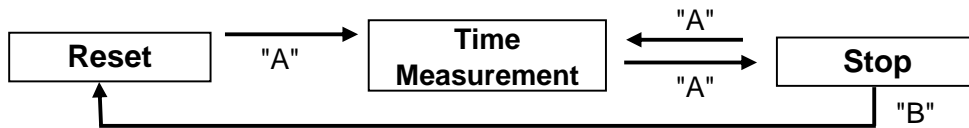

E) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 2nd Click Position.
2. Press the button "A" once to set the chronograph second hand to the Zero position.
 - * The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hands are set at Zero position, reset the time and return the crown to its normal position.

These specifications might be changed without prior notice.

CITIZEN WATCH CO., LTD.